

WAVYTALK	修改次数 V3	日期 2026/04/16	产品部门: 美发事业部	产品对接人: 肖玲娟
			产品名称: 空气造型器	包装设计师: 李淑娟
释放文件	产品型号	H2 美标 说明书		TO供应商: 希望包装成品表面平整 边角棱锐、无裂纹、 无爆边、整体干净美观
	尺寸	90x115mm		
	纸张	105克双面铜版纸		
	印刷	四色印刷		
	工艺	骑马钉装订（共12页）		

封底

封面

MANUFACTURED FOR:

 
Freshine Products, Inc.
9 E 19th Street, Floor 5, New York, NY 10003

✉ support@wavytalk.com

☎ +1 972-467-4080

🌐 www.wavytalk.com

WAVYTALK

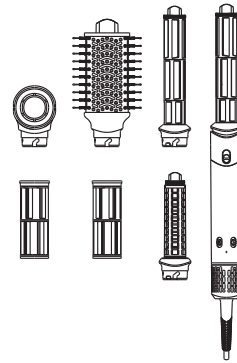

Airshape Pro Roller Air Styler Set

USER MANUAL

H2

CONTENTS

(EN) English..... 2 - 13

Instruction Manual (EN)

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING. KEEP AWAY FROM WATER.

⚠ DANGER

As with most electronic appliances, the electronic parts are electrically live even when the switch is off. **To reduce the risk of death by electric shock:**

1. Always "unplug it" immediately after using.
2. DO NOT use while bathing.
3. DO NOT place or store the appliance where it can fall or be pulled into a tub or sink.
4. DO NOT use near, place in or drop into water or other liquid.
5. If the appliance falls into water, "unplug it" immediately. DO NOT reach into the water.
6. DO NOT use an appliance with a twisted, bent, or otherwise damaged cord.
7. Keep away from children.

⚠ WARNING

To reduce the risk of burns, electrocution, fire, or injury to persons:

1. An appliance should never be left unattended when plugged in. Turn off the switch and unplug the electrical cord when not in use.
2. Close supervision is necessary when this appliance is used by, on, or near children or individuals with certain disabilities.

3. Use this appliance only for its intended use as described in this manual. DO NOT use attachments not recommended by the manufacturer.
4. Never use while sleeping or drowsy.
5. Never drop or insert any object into any opening or hose.
6. DO NOT use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
7. DO NOT use an extension cord with this appliance.
8. DO NOT direct hot air toward eyes or other heat-sensitive areas.
9. DO NOT place this appliance directly on any surface while it is hot or plugged in.
10. Attachments (when furnished) may be hot during use. Allow them to cool before handling.
11. DO NOT operate this appliance with a voltage converter.
12. Never block the air openings of the appliance or place it on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint, hair, and the like.
13. While using the appliance, keep your hair away from air inlets.
14. Never operate this appliance if it has a damaged cord or plug, if it is not working properly, damaged or dropped into water. Return the appliance to a service center for examination and repair.
15. Keep the cord away from heated surfaces. Do not pull, twist or wrap the cord around the appliance.
16. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge unless they have been given supervision or instruction concerning the usage of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
17. Do not use the appliance if the supply cord is damaged. In this case, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
18. This appliance is not a toy. Keep away from children.

3

19. For additional protection, the installation of a residual current device (RCD) having a rated residual operating current not exceeding 30 mA is advisable in the electrical circuit supplying the bathroom. Ask your installer for advice.
20. The appliance and attachments contain magnets, keep away from implanted medical devices such as pacemakers and defibrillators as they may be affected by strong magnetic fields.

OPERATING INSTRUCTIONS

1. This appliance is intended for household use only. Use on Alternating Current (60 hertz). Standard Dryers are designed to operate at 120 volts AC.
2. Always ensure the voltage to be used corresponds to the voltage stated on the unit before plugging the appliance into the mains socket.
3. When not in use, "unplug it". Allow the appliance to cool and store out of children in a safe, dry location.
4. DO NOT wrap the cord around the appliance. Check the cord regularly for any sign damage.
5. This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.
6. Please remember to abide by the local environmental regulations: dispose of unwanted electrical equipment at the appropriate waste disposal center. The packaging material is recyclable. Dispose of the packaging materials in an environmentally friendly manner.



WARNING: Do not use this appliance near bathtubs, showers, basins or other vessels containing water.

4



THIS MESSAGE ABOUT...

GROUND
FAULT
CIRCUIT
INTERRUPTERS

...CAN SAVE A LIFE

5

IF YOU MUST USE YOUR HAIR DRYER IN THE BATHROOM, INSTALL A GFCI* NOW! YOUR LOCAL ELECTRICIAN CAN HELP YOU DECIDE WHICH TYPE IS BEST FOR YOU -- A PORTABLE UNIT THAT PLUGS INTO THE ELECTRICAL OUTLET OR A PERMANENT UNIT INSTALLED BY YOUR ELECTRICIAN. THE NATIONAL ELECTRICAL CODE NOW REQUIRES A GFCI IN THE BATHROOM. GARAGES, AND OUTDOOR OUTLETS OF ALL NEW HOMES.



WHY DO YOU NEED A GFCI? ELECTRICITY AND WATER DON'T MIX. IF YOUR HAIR DRYER FALLS IN WATER WHILE IT'S PLUGGED IN. THE ELECTRIC SHOCK CAN KILL YOU ... EVEN IF THE SWITCH IS "OFF".


A REGULAR FUSE OR CIRCUIT BREAKER WON'T PROTECT YOU UNDER THESE CIRCUMSTANCES. A GFCI OFFERS YOU FAR GREATER PROTECTION.

A GFCI CAN SAVE YOUR LIFE! COMPARED TO THAT, THE PRICE IS SMALL! DON'T WAIT... INSTALL ONE NOW!

*GFCI (GROUND FAULT CIRCUIT INTERRUPTER) IS A SENSITIVE DEVICE WHICH REACTS IMMEDIATELY TO A SMALL ELECTRIC CURRENT LEAK BY STOPPING THE ELECTRICITY FLOW.

6

PRODUCT DESCRIPTION

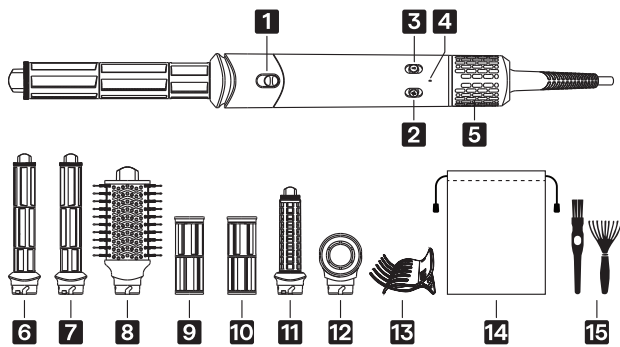

- | | |
|--|--|
| 1 Power on/off with Cool Shot | 2 Airflow Control |
| 3 Temperature Settings | 4 Ion Indicator Light |
| 5 Removable Filter Cage | 6 Auto-Wrapping Curlers (Left) |
| 7 Auto-Wrapping Curlers (Right) | 8 Volumizing Oval Brush |
| 9 Auto-Wrapping Rollers (Top) | 10 Auto-Wrapping Rollers (Side) |
| 11 Roller Base | 12 High-Speed Dryer |
| 13 Clips | 14 Storage Bag |
| 15 Hair Brush Cleaner | |

7

SPECIFICATION

Product Name	Air Styler Set
Voltage	120V~
Frequency	60Hz
Power Rating	1200W
Cord Length	79"/ 2M
Wind Speed	Low / Medium / High
Heat Setting	Cool / Medium / High

TURN ON/ OFF

1. The power switch has three positions: OFF, ON, and COOL.
2. When the switch is set to the "OFF" position, the product is turned off.
3. When the switch is pushed to the "ON" position, the product and negative ion generator begin operating, and the negative ion indicator light (blue) illuminates.
4. For cool air, continue pushing the power switch upward to the "COOL" position and hold it there. Once released, the switch will automatically return to the "ON" position, and heating will resume.

WIND SPEED ADJUSTMENT

1. The wind speed settings are divided into three levels: Low, Medium, and High.
2. When the power switch is in the "ON" position, you can select the desired speed: low, medium, or high.

8

TEMPERATURE ADJUSTMENT

1. The temperature settings are divided into three levels: Cool, Medium, and High, indicated by blue, orange, and red lights respectively.
2. When the power switch is in the "ON" position, push the temperature button to adjust the air temperature.
3. When the power switch is in the "COOL" position, the heating element will not operate regardless of the temperature button's position, and only cool air will be output.

⚠ Warning

The air exit and attachments may be hot during use.

HOW TO ASSEMBLE

Before attaching the attachment to the handle, please ensure that the triangle mark on the attachment aligns with the triangle mark on the back of the handle. Then press down the attachment and gently rotate it to the left to complete the installation.

HOW TO DISASSEMBLE

Slide down the loading button on the back of the handle with one hand, and rotate the attachment on the handle to the right with the other hand. Please note that if you do not slide and hold the loading button, the attachment will not be pulled out.


HOW TO USE THE ALCI

The ALCI safety device in this unit is built into the plug. This device will make it inoperable under some abnormal conditions, such as accidental immersion in water. If the appliance is immersed in water, do not attempt to reset the ALCI safety device. The ALCI safety device is equipped with a test button so that its operation can be checked.

9

TO USE

1. Press the Reset button on the ALCI safety device.
2. Plug your ALCI into an AC outlet then press the Test button.
3. The Reset button will pop out. This verifies the safety device is operating properly. If the Reset button does not pop out, do not use the unit. Return it immediately for service.
4. Press the Reset button to reactivate the ALCI safety device. This appliance is ready for use. Repeat this procedure every time you use it to confirm that the safety device is ready and operational.

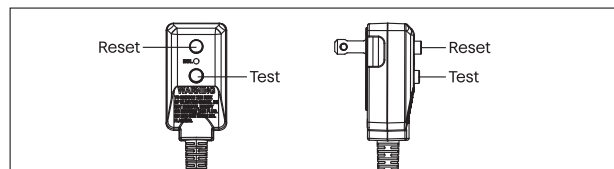

STYLING TIPS

1. Use the hair dryer to dry your hair until it is about 80% dry (damp).
2. Based on your styling needs, switch to the desired attachment to complete your look.

Auto-Wrapping Curlers


- ① Start with slightly damp hair (70-80% dry). Divide hair into small sections from bottom to top.
- ② Select the barrel based on desired curl direction.
L: Recommended for left side of the head
R: Recommended for right side of the head
- ③ Hold a small section of hair (1/2"-1") at the mid-lengths, letting the ends dangle. Turn on your Airshape Pro and place the barrel behind the loose ends. The hair will automatically wrap around the barrel - no manual wrapping necessary.

10

- ④ After ends wrap, release the hair and slowly move the barrel towards the root, letting hair wrap naturally. Hold for 15 seconds. Push the power switch up and hold to activate the Cool Shot function. Hold for another 5-10 seconds. Switch the power off and release hair from around the barrel.

Auto-Wrapping Rollers

- ① Start with slightly damp hair (70-80% dry). Attach the roller base to the Airshape Pro. Divide hair above the ears into two areas: top (mohawk) and sides (temples).
- ② Select the roller based on the section of hair you will be working with.
- Top: Recommended for top (mohawk) section
Side: Recommended for sides (temples)

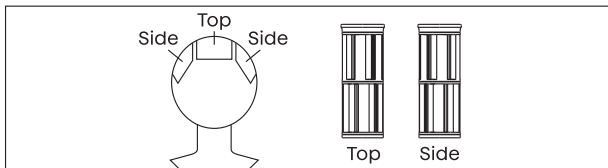

- ③ Hold a small section of hair (1/2"-1") at the mid-lengths, letting the ends dangle. Hold the barrel horizontally and position it in front of the loose hair. Turn on your Airshape Pro. The hair will automatically wrap around the barrel - no manual wrapping necessary.
- ④ After ends wrap, release the hair and slowly move the barrel towards the root, letting hair wrap naturally. Hold for 15 seconds. Push the power switch up and hold to activate the Cool Shot function. Hold for another 5 seconds.
- ⑤ Switch the power off and remove the magnetic roller from the base. Secure the roller firmly at the root with a clip. Let the hair set for 20 minutes before removing the clip and roller.

11

Volumizing Oval Brush

For voluminous blow-drys, place the brush attachment under the hair close to the roots and roll outward to the ends. For extra lift at the roots, hold the brush attachment for 2 to 3 seconds under the roots.

3. Repeat this process for each section of hair.
4. After use, press the "On/Off" button to turn it off and unplug the appliance.

REMARK: During the first few minutes of use, you may notice smoke and a slight odor. This phenomenon is normal and disappears quickly.

MAINTENANCE

1. Unplug the appliance from the power source, then remove hair from the appliance and attachments.
2. Keep heated surfaces clean and free of dust, dirt, and hair spray.
3. Wipe the exterior with a damp cloth. If the cord becomes twisted, untwist prior to use.

WARNING: If any malfunction occurs, do not attempt to repair. This appliance has no user-serviceable parts.

STORAGE

1. Make sure that the appliance is turned off, unplugged, and has cooled off.
2. Allow appliance to cool and store out of reach of children in a safe dry location. Never wrap the cord around the appliance since this will cause the cord to wear prematurely and break.
3. Handle cord carefully for longer life and avoid jerking, bending sharply, twisting, or straining cord, especially at plug connections.
4. DO NOT hang appliance up by the cord.
5. Store in the original packaging or in a clean, dry place.

12

CLEANING

1. If cleaning becomes necessary, unplug the appliance from the power source and wipe the exterior with a damp cloth.
2. Dust and lint can be removed from air intake openings with a small brush or vacuum cleaner brush attachment.
3. DO NOT wash in water or allow moisture or additional debris to enter the unit while cleaning.

IF YOUR PRODUCT STOPS WORKING, PLEASE FOLLOW THE PROCEDURE BELOW:

1. Switch off the unit.
2. Unplug the unit from the plug socket and check the socket to see if it works.
3. Wait for 15 minutes and then plug the unit back into the wall socket or into another socket.
4. Switch the unit back on.

LIMITED ONE YEAR WARRANTY

This appliance comes with a one-year warranty. If you have any questions, please feel free to contact us. In any case, we will give you a satisfactory solution.